

**NOTE:** Should the vehicle have a high proportion of short journeys or operate in severe conditions, Land Rover recommends that the maintenance intervals be cut in half. Contact your Land Rover retailer for additional information and recommendations.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).											
SERVICE	Type	A	B	A	B	A	B	A	B	A	B	A	B
	Miles x 1000	15	30	45	60	75	90	105	120	135	150		
	Months	12	24	36	48	60	72	84	96	108	120		
	Kilometers x 1000	24	48	72	96	120	144	168	192	216	240		
Change engine oil and replace filter													
<b>VEHICLE INTERIOR</b>													
Reset the Service Interval Indicator													
Reset engine oil level indicator													
Check operation of all lights, warning indicators and horn													
Check operation of front/rear wiper washer systems													
Check condition and security of seats and seat belts													
Replace pollen filter													
<b>VEHICLE EXTERIOR</b>													
Check condition of wiper blades													
Check operation of all door/flap/hood checks and catches; lubricate door checks													
Conduct corrosion warranty inspection													
<b>ENGINE COMPARTMENT</b>													
Check battery condition; check / top up electrolyte level													
Check / top up fluid levels (brake, power steering, windshield washer)													
Check / top up coolant level; check specific gravity													
Check condition of accessory drive belt(s) and, if fitted, supercharger drive belt													
Change brake fluid: <b>every 3 years</b>													
Change engine coolant: <b>every 10 years</b>													
Clean debris from auxiliary oil cooler (supercharged vehicles)													
Replace spark plugs													
Replace fuel filter													

		Maintenance Interval – whichever occurs first (based on expected vehicle display).											
SERVICE	Type	A	B	A	B	A	B	A	B	A	B	A	B
	Miles x 1000	15	30	45	60	75	90	105	120	135	150		
	Months	12	24	36	48	60	72	84	96	108	120		
	Kilometers x 1000	24	48	72	96	120	144	168	192	216	240		
<b>ENGINE COMPARTMENT (CONTINUED)</b>													
Replace air cleaner elements													
Replace accessory drive belt(s)													
Replace supercharger drive belt (supercharged vehicles): <b>every 7 years</b>													
<b>VEHICLE UNDERBODY</b>													
<b>NOTE:</b> Remove all road wheels before inspecting brake components.													
Inspect brake pads for wear, calipers for leaks, and discs for condition													
Lubricate wheel centers													
Check adjustment of electronic parking brake													
Inspect tire pressures, condition, and tread depth													
<b>NOTE:</b> Refit wheels to opposite sides of the same axle, unless vehicle is fitted with unidirectional tires.													
Inspect exhaust system for leaks, security and damage													
Inspect for fluid leaks													
Inspect condition and operation of suspension and steering components													
Inspect fuel, hydraulic and fluid pipes, hoses and unions													
Inspect electrical harnesses, routing and connections													
Replace all flexible brake hoses: <b>every 6 years</b>													
Change transmission fluid and filter: <b>every 10 years</b>													
Change rear locking differential oil													
Change front and rear axle oil (non-locking differential): <b>every 10 years</b>													
Change transfer box oil; replace drain and fill plugs and washers													
Remove debris from between Dynamic Response valve block and chassis													
Replace filter in Dynamic Response valve block; replace lost fluid													
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears													